## **Smart Phone RCU Setting Process**

Item	1st Step	2nd Step	3rd Step	4th Step	5th Step
Process	SmartRCU	Advance Setting  LNB Power ON  LNB Voltage 13V/18V  Front Panel Button ON  Antile Voltage ON  Phone RCU ON	Wired  DHCP  1 9 2.1 6 8.0 0 0.0 0 9  2 5 5.2 5 5.2 5 5.0 0 0  1 9 2.1 6 8.0 0 0.0 0 1  1 6 8.1 2 6.0 6 3.0 0 1  1 6 8.1 2 6.0 6 3.0 0 2	SmartRCU  P Address: 192.168.0.9  Connect  Mute Power  Vol+ USB CH+	IP Address: 192,168.0.9  Connect Disconnect  Mute Power  Vol+ USB CH+
	Download "SmartRCU.apk" to your smart phone (Android Phone version : Over v4.0 only)	In Advance Setting, change Phone RCU with "ON"	Check IP Address in Network Setup menu	Open program and input same IP Address checked in Network Setup menu and press "Connect" button	Connected. If you want to disconnect, press "Disconnect" button
Menu	Mute Power  Vol+ USB CH+  Vol- M+ CH-  Menu Up Exit  Left OK Right  Info Down Sat	Red Green Vellow Blue  ADL 1080 INF+  Audio 3D Tv/Ra  TXT+ EPG FAV  1 2 3  4 5 6	Disconnect  1 2 3  4 5 6  7 8 9  Prev 0 HD  Pause Stop Play Rec  MPip PIP PSwap PList		