


## Connections Guide

### 1 Aerial Connections


- Connect the cable from the satellite dish to LNB IN.
- Optional 3rd Tuner
  - 2x SAT tuners fixed, 1 more optional tuner slot for Satellite or Terrestrial/Cable reception (\*Note)
  - Connect the cable from the antenna to ANT IN. ( Optional tuner )
  - Connect the cable from the satellite dish to LNB IN. ( Optional tuner )

\* Note : Hybrid 3rd tuner module supports both Terrestrial & Cable reception.

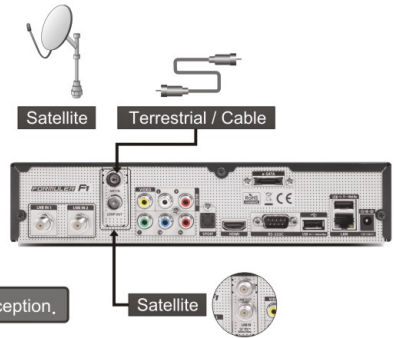


### 2 Digital A/V Output Connections

- Connect the HDMI Cable to the HDMI Connector of your TV.
- Connect SPDIF to Digital audio input of the equipment (Digital Audio)

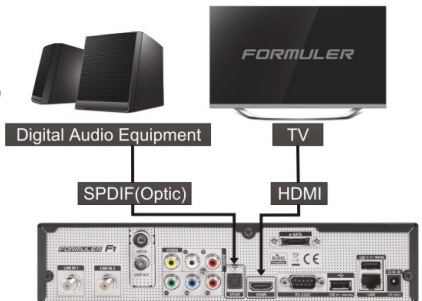

### 3 Composite Video Connections

- Connect the Component to the Component input of your TV.
- Connect the RCA to the RCA input of your TV.

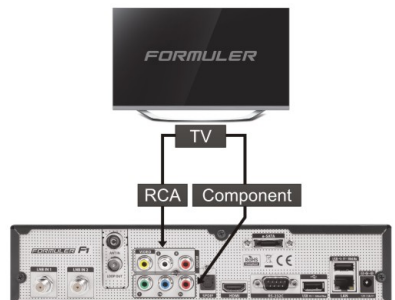

## Troubleshooting

Problem	Solution
<b>No or Bad Signal</b>	<p><b>For Satellite tuner module</b></p> <ul style="list-style-type: none"> <li>• Check the LNB ; Replace the LNB if necessary.</li> <li>• Check the cable from the LNB.</li> <li>• Check the position of the dish; realign dish if necessary.</li> <li>• If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch.</li> </ul> <p><b>For Terrestrial tuner module</b></p> <ul style="list-style-type: none"> <li>• Check the connection of Aerial antenna line.</li> </ul> <p><b>For Cable tuner module</b></p> <ul style="list-style-type: none"> <li>• Check the connection of Broadcasting Cable line.</li> </ul> <p><b>Common features for all types of DVB receivers</b></p> <ul style="list-style-type: none"> <li>• Check the 'Signal Level' and the 'Signal Quality'.</li> </ul>
<b>Poor picture quality</b>	<ul style="list-style-type: none"> <li>• See '<b>No Picture</b>' above.</li> <li>• Check the signal level, if this is low then tries adjusting the alignment of your dish.</li> </ul>
<b>No Picture</b>	<ul style="list-style-type: none"> <li>• See '<b>Does not display any message on the front panel</b>' above.</li> <li>• To match the STB system with your TV system (PAL/NTSC), press VFormat button until a picture is displayed.</li> <li>• Check the video output port is firmly connected to the TV or VCR.</li> <li>• Check that you have selected the Video Input on your TV.</li> <li>• Check the brightness level of the TV.</li> <li>• Check the resolution that your TV supports, and set the proper resolution with the remote <i>Resolution</i> button to obtain a picture.</li> </ul>
<b>Does not display any message on the front panel.</b>	<ul style="list-style-type: none"> <li>• Check the main power cable and check that it is plugged into a suitable power outlet.</li> </ul>
<b>No Sound</b>	<ul style="list-style-type: none"> <li>• See '<b>No Picture</b>' above.</li> <li>• Check the volume level of the TV and STB.</li> <li>• Check the Mute status of the TV and STB.</li> </ul>
<b>Remote Control does not operate</b>	<ul style="list-style-type: none"> <li>• Point remote control directly towards the STB.</li> <li>• Check that the STB button lights up when you press any button.</li> <li>• Check and replace batteries.</li> </ul>

## Included Accessories



## Separately purchased Accessories

