


Firmware update Anleitung OCTAGON SF208 & 228 HD E2

- a) USB Medium auf FAT32 formatieren.
- b) Firmware entpacken.
- c) Ordner *sf208* oder *sf228* auf USB Medium kopieren.
- d) Gerät ausschalten (stromlos) am Netzschalter.
- e) USB-Stick in den USB-Port auf der linken Seite des OCTAGON` s einstecken.
- f) Gerät am Netzschalter einschalten.
- g) Meldung im Display: *Siehe Bild*



- h) Drücken Sie die **CH+** Taste oben auf Gehäusedeckel des OCTAGON` s.
Siehe Bild

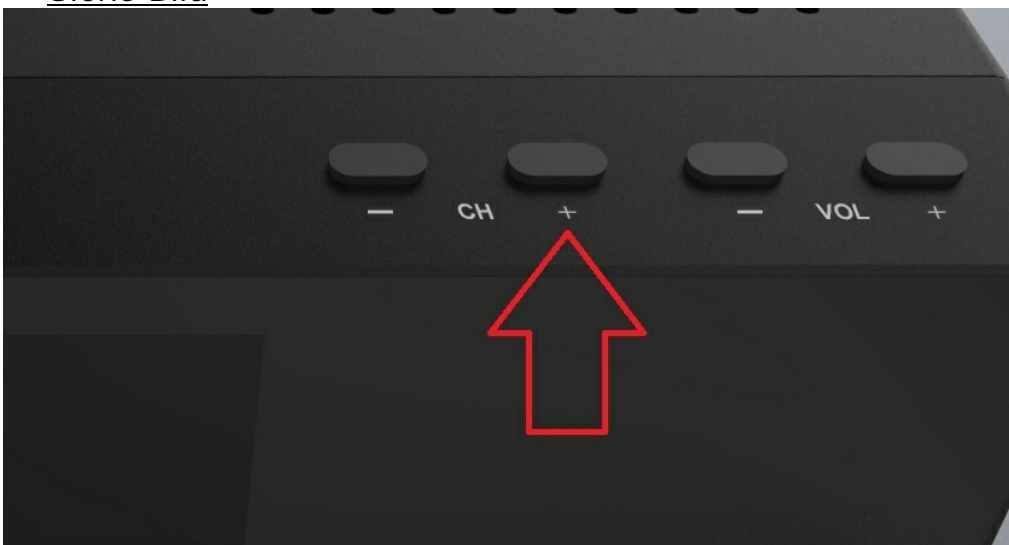

- i) Das Image wird jetzt geschrieben, dauert ca. 5 Minuten.
Es erscheint während dieser Zeit folgende Meldung im Display (Siehe Bild)




- j) Nach Abschluss des Flashvorgangs erfolgt ein Reboot des OCTAGON` s

Firmware update Manual OCTAGON SF208 & 228 HD E2

- Format USB Storage to FAT32 File system.
- Unpack Firmware.
- Copy Folder sf208 or sf228 to USB Storage.
- STB Turn off from Power Switch.
- Connect USB Storage to STB (left USB port).
- Turn on STB from Power Switch.
- Message on Display: See picture



h) Press **CH+** Button on Top cover.
See picture

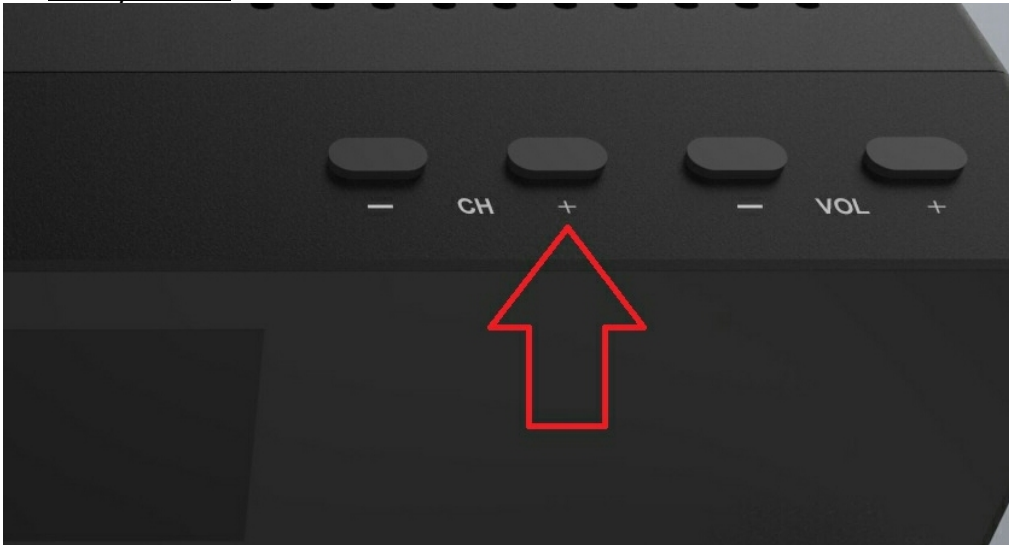

i) The image is now written, takes about 5 minutes.
The following message appears on the display during this time (*See picture*)



j) Upon completion, the system will be rebooting.

OCTAGON GERMANY - <http://www.octagon-germany.eu/>
OCTAGON Support - <http://octagon-forum.eu/>

